

2-in-1 Clamp Tool Adjustment Guide

It is rare for your tool to need adjustment. If when using your tool it feels too easy to clamp your fittings, or if it feels loose, then it may be time to check and adjust the tool.

Step 1: Check your completed joint with the included go/no-go gauge. If the gauge does not fit over the joint then your tool requires adjustment.



Step 2: Take your spanner (included) and remove one of the nuts as pictured (left).

Step 3: Remove the nut with the numbered increments on it and then re-insert it at the next number. i.e. if it was originally on setting 2, change it to 3.



It is important to only adjust one by one increment at a time and only adjust one side of the tool at a time.

Step 4: Re-attach the washer and lock nut and then reclamp your joint. Repeat step one to ensure that the adjustment is complete.

Thanks for choosing PWS

www.pwsinternational.com